


The gate doesn't move up

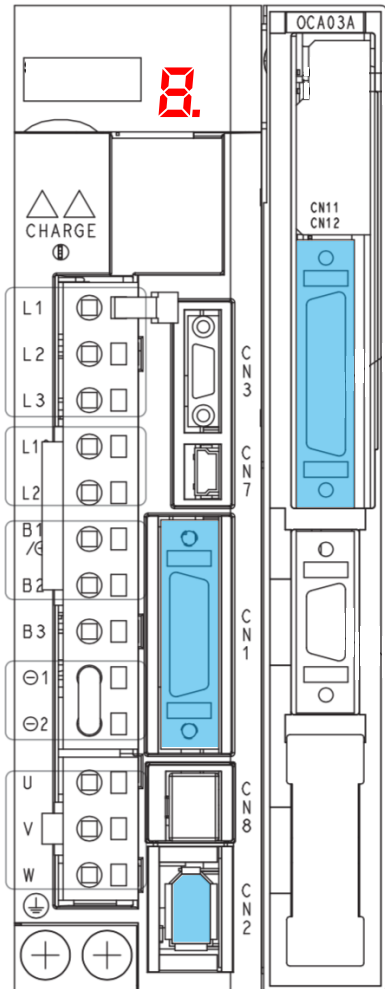

1 / Switch off the E-BOX and check that all the connectors inside are well connected.
(The 3 blue connectors represented)

2 / Switch on the E-BOX & wait the end of the boot.

If the gate continues to not move :
The Red digit represented above will show different numbers and letters.
Save the error code (in making a short video or in writing it) & contact us to have more information. (E-Mail or Whatsapp)

There is no sound

1 / Switch off the E-BOX and remove the SD card

2 / Put back the SD card, switch on the E-BOX and wait the end of the boot.

If there is still no sound :

A- Put earphone in the jack output and check that the sound is working.

B- Disconnect the speaker from its location and test it directly on the voice card.

C - Test with an other speaker. (8 ohms)

Problem on the remote / lights

1 / Switch off the E-BOX and check that all the connectors are in good state.

2 / Switch on the E-BOX and wait the end of the boot.