


## REMOTE CONTROL

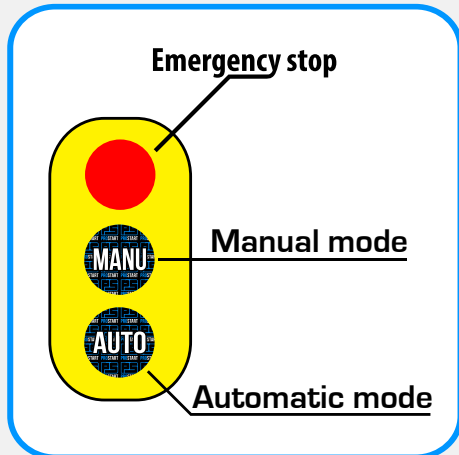

## MANUAL MODE


- Switch on the PROBOX
- Release the emergency stop button  
*[Prostart welcome]*
- Press the MANU button  
*[Gate is going up]*
- Press the MANU button  
*[Attention]*
- Press the MANU button  
*[Start is coming]*

## AUTOMATIC MODE

- Switch on the PROBOX
- Release the emergency stop button
- Press the AUTO button  
*[Stop after 15 starts]*
- Automatic mode stops after pressing the AUTO button**
- Does not work with programs II

Canceling a start by pressing the MANU button before the last sentence (Before "Watch the gate")

## HOW TO CHOOSE A PROGRAM

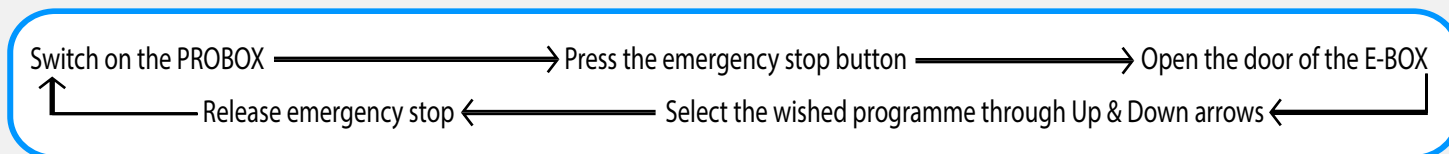

### PROGRAM N°I

Training program

Random start without voice  
*[Only beeps et lamps]*

Works in Auto & Manu modes.

### PROGRAM N°0

**Official program**

Random start - UCI conformity  
*[Between 0,1 et 2,7 seconds]*

Works in Auto & Manu modes.

### PROGRAM N°II

Training program

Short or long start  
*[0,1 OR 2,7 seconds]*

The Auto button is a swing in order to move from short to long start.

Works in Manu mode only.

After switching on the E-BOX, program N°0 is automatically set up.

## VOICE CARD

In opening the starting system, you can access on voice card.

The volume of speakers can be adjusted from this card thanks to the black potentiometer.

*Do not turn up to the maximum in order to avoid any overheating.*


A jack plug with an unamplified sound output is available in order to connect the gate to a sound amp during competitions.

## HOW TO ADJUST THE TIMING

### 4 TIMING

#### **Fixed Green** (Gate will go down at the beginning of green) **UCI Official Timing**

- Fixed Green & red blinking (Gate will go down +30ms after the beginning of green)
- Fixed Green & Orange1 blinking (Gate will go down +60ms after the beginning of green)
- Fixed Green & Orange2 blinking (Gate will go down +90ms after the beginning of green)

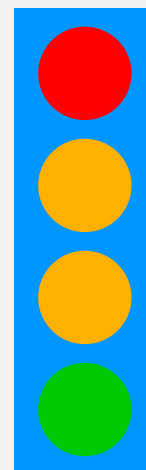


### OPÉRATIONS

- Switch on the E-BOX
- Press the emergency stop
- Press the MANU button during 5 seconds
- Release / Press the MANU button until find the wished timing

## HOW TO ADJUST THE TIME BETWEEN TWO AUTOMATIC STARTS

### 4 TIMES

- Red One start every 30 seconds
- Orange 1 One start every minute
- Orange 2 One start every two minutes
- Green One start every three minutes

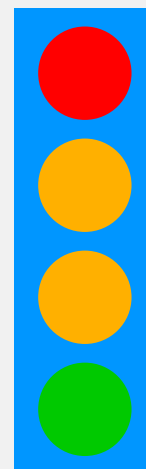

### OPÉRATIONS

- Switch on the E-BOX
- Press the emergency stop
- Press the AUTO button during 5 seconds
- Release / Press the AUTO button until find the wished timing
- Release the emergency stop

## SYSTEM WARNING

If the gate spells in French «Défaut du moteur électrique», first things is to wait than the initialisation is completely finished. If the warning is still on, we advise you to read the instructions in the inside of the E-BOX door to identify the problem meet.