



Random start without voice (Only beeps et lamps)

Works in Auto & Manu modes.

**Official program** 

Random start - UCI conformity (Between 0,1 et 2,7 seconds)

Works in Auto & Manu modes.

Training program

Short or long start (0,1 OR 2,7 seconds) The Auto button is a swing in order tomove from short to long start.

Works in Manu mode only.

After each switching on PROBOX, program N°0 is automatically set up.

# **VOICE CARD**

In opening the starting system, you can access on voice card.

The volume of speakers can be adjusted from this card thanks to the black potentiometer. Do not turn up to the maximum in order to avoid any overheating.

A jack plug with an unamplified sound output is available in order to connect the gate to a sound amp during competitions.



#### HOW TO ADJUST THE TIMING

)	Fixed Orange	(Gate will go down at the beginning of orange 2, -120ms earlier than official)
	Flashing Orange	(Gate will go down at the end of orange 2, -60ms earlier than official)
	Fixed Green	(Gate will go down at the beginning of green) - TIMING OFFICIEL UCI
	Flashing Green	(Gate will go down at the end of green, +60ms later than official)

5
Ĕ
~
<u> </u>
$\mathbf{O}$

Switch on the PROBOX Press the emergency stop Press the MANU button during 5 seconds Release / Press the MANU button until find the wished timing Release the emergency stop

### HOW TO ADJUST THE TIME BETWEEN TWO AUTOMATIC STARTS

Red	One start every 30 seconds
Orange 1	One start every minute
Orange 2	One start every two minutes
Green	One start every three minutes



Switch on the PROBOX Press the emergency stop Press the AUTO button during 5 seconds Release / Press the AUTO button until find the wished timing Release the emergency stop



## AIR PRESSURE WARNING

This warning is only available if the PROBOX is used with a Prostart pneumatic gate. "Air pressure is too low" = The pressostat isn't receiving the proper air pressure.



Check the operation of the compressor (pressure inside the compressor > = the selected pressure on the FRL) Check the correct pressure on the nanometer regulator. (7 bars for a 8-man gate)

#### DO NOT MODIFY THE PRESSOSTAT SETTING BEFORE DOING THE CHECKS ABOVE